



HALO HEATER GUARDIAN - HG-75

COMPLETE FILTER & SCALE INHIBITOR SYSTEM

DIMENSIONS: 15" H X 5" W X 6" D
SHIPPING WEIGHT: APPROX. 6.2 LBS.
INLET/OUTLET: 0.75" NPT

INCLUDES:

FULLY ASSEMBLED SYSTEM INCLUDING: FILTER HOUSING WITH REVERSIBLE STEEL MOUNTING BRACKET LIQUID FILLED PRESSURE GAUGE AND PRESSURE RELIEF VALVE, (1) HG-RC-75 HEATER GUARDIAN CARTRIDGE AND FILTER WRENCH. COMPLETE INSTALLATION & MAINTENANCE GUIDE.

RATED FLOW: EFFECTIVE UP TO 12.5 GPM

CAPACITY: UP TO 50,000 GALS. (RECOMMEND REPLACEMENT ANNUALLY)

REPLACEMENT MEDIA:

MODEL HG-RC-75 HEATER GUARDIAN CARTRIDGE



HALO HEATER GUARDIAN - HG-100

COMPLETE FILTER & SCALE INHIBITOR SYSTEM

DIMENSIONS: 18" H X 7" W X 8" D
SHIPPING WEIGHT: APPROX. 13.4 LBS.
INLET/OUTLET: 1" NPT

INCLUDES:

FULLY ASSEMBLED SYSTEM INCLUDING: FILTER HOUSING WITH REVERSIBLE STEEL MOUNTING BRACKET LIQUID FILLED PRESSURE GAUGE AND PRESSURE RELIEF VALVE, (1) HG-RC-100 HEATER GUARDIAN CARTRIDGE AND FILTER WRENCH. COMPLETE INSTALLATION & MAINTENANCE GUIDE.

RATED FLOW: EFFECTIVE UP TO 22.5 GPM

CAPACITY: UP TO 75,000 GALS. (RECOMMEND REPLACEMENT ANNUALLY)

REPLACEMENT MEDIA:

MODEL HG-RC-100 HEATER GUARDIAN CARTRIDGE




Installation Instructions

All systems must be installed by a licensed and qualified technician. Follow all local plumbing codes. The filter cartridge is designed to be changed annually but more frequent replacement may be necessary, depending upon the influent water quality, the number of occupants and service flow rates.

1. Mount filter and housing to wall using appropriate hardware. Mounting to a stud is preferred.
2. Plumb cold water feed to inlet of filter.
3. Plumb outlet of filter to inlet of tank or tankless water heater.
4. Slowly pressurize filter and monitor water pressure. **If the pressure exceeds 80 psi, stop and install a pressure regulator.**
5. Carefully inspect system for leaks. Do not over tighten.

Please Note: HALO Guardian is rated for cold water treatment only.

Install on the cold water inlet of water heater.

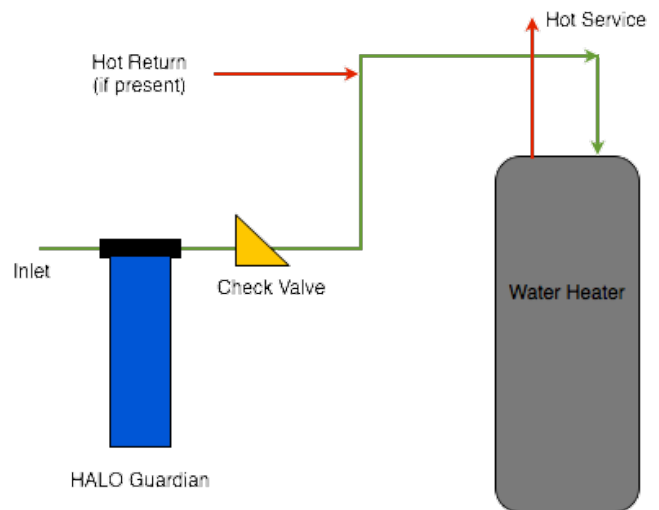

You MUST install a check valve on outlet side of GUARDIAN unit in order to prevent thermal expansion.

DO NOT RUN HOT WATER through HALO GUARDIAN unit. Warranty Void if water temperature exceeds 120°F.